



**MOTOROLA**

**BRAVO *Encore!***

Numeric Display Pager



**Operating  
Instructions**

## Turning Your Pager On:

- Press  $\ominus$  to turn your pager on. Your pager alerts indicating that it is on.

The time of day and the “Alert Mode” indicator, silent (🔇) or audible (🔊), appears on the display.

## Receiving and Reading Your Messages:

Your BRAVO *Encore!* pager can receive up to eight 20-character messages.

When a message is received, your pager alerts for eight seconds.

- Press any button to stop the alert.
- Press  $\ominus$  to display your message.
- Press  $\blacksquare$  twice while reading your message to return to the main status screen.



Messages containing more than 12 characters display on a second screen. The (▶) symbol indicates additional screens. The second screen displays automatically after one minute, or you can press  $\ominus$  to advance to the second screen. The last screen of your message displays the message slot number and the time your message was received.

If a message is left unread, the pager emits a reminder alert every two minutes, and the number of unread messages is displayed on the screen (i.e., *1 PAGE, 2 PAGES*).

## Turning Your Pager Off:

- Press  $\text{\textcircled{A}}$  until the *PAGER OFF ?* prompt appears on the display.
- Press  $\ominus$  to turn your pager off.

When your pager is turned off, the clock display remains on the screen. The “Alert Mode” indicator does not.

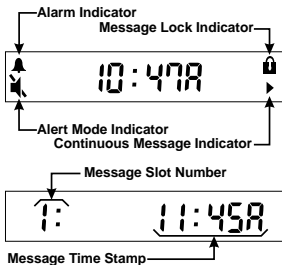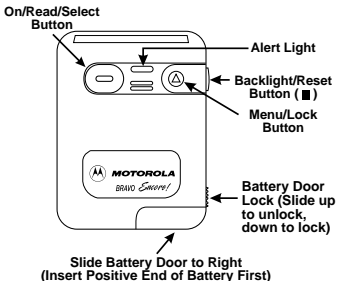

### Turning On the Light:

- Press ■ while the clock or a message is displayed to turn on the display light.
- To turn off the light, press ■ again while the message or the clock is displayed or allow it to turn off automatically.

## Changing Alert Modes:

- Press  $\odot$ . Either *SILENT*  $\Rightarrow$  or *AUDIO*  $\Rightarrow$  appears, depending on the current mode. For your pager to vibrate, it must be in the “Silent” mode.
- To change the alert mode, press  $\ominus$  while your choice appears on the display.

## Setting the Clock:

- Press  $\odot$  until *SET TIME*  $\Rightarrow$  appears.
- Press  $\ominus$  to set your pager’s clock.
- Press  $\odot$  until the desired hour appears. To move to the next digit, press  $\ominus$ . Repeat this process for each field (hours, minutes, AM/PM).
- Press  $\blacksquare$  twice to return to the main status screen.

## Setting the Alarm:

- Press  $\odot$  until *SET ALARM*  $\Rightarrow$  appears on the display.
- Press  $\ominus$  to select the alarm on/off sequence.
- Press  $\odot$  to turn on or turn off the alarm. To move to the next digit, press  $\ominus$ . To advance through each digit press  $\odot$ . Repeat this process for each field (On/Off, hours, minutes, AM/PM).
- Press  $\blacksquare$  twice to return to the main status screen.

The  $\blacksquare$  indicator appears on the display when the alarm is turned on. At the selected time, the alarm vibrates or emits a unique 20-second alert, and *ALARM* appears on the display.

- Press any button to stop the alarm alert.
- A set alarm activates even when your pager is off.

## Locking Messages:

- To lock a message, press  $\odot$  while reading your message. A lock  $\blacksquare$  appears on the display to indicate that your message is protected.
- To unlock your message, press  $\odot$  while reading the locked message.

Locked messages cannot be erased, overwritten by new messages when memory is full, or lost while replacing the battery. Up to four messages may be locked at one time.

### **Erasing Messages From Memory:**

- Press  $\text{\textcircled{A}}$  until *ERASE ALL*  $\text{\textcircled{P}}$  appears on the display.
- Press  $\text{\textcircled{B}}$ . All of your read, unlocked messages will be erased.

The *ERASE ALL*  $\text{\textcircled{P}}$  prompt appears only if there are read, unlocked messages in memory.

### **Battery Information:**

Your BRAVO Encore! pager is designed to operate with an AAA-size alkaline battery. See diagram for battery door location. The hinged battery door, if detached from the pager, can be easily snapped back into place.

### **Other Pager Features:**

When the battery is reaching the end of its life, a low-battery alert occurs and *LO CELL* is displayed. Also, all pager alerts are changed to two seconds.

*OVERFLOW* is displayed when the number of unread messages received is greater than the available message memory. The oldest unread message is replaced by a new message. Once you have read all of your unread messages, the time of day appears on the display. If the same message is received more than once, *DUPLICATE* appears at the beginning of the new message. Your new message contains the latest timestamp.

When a message is read that does not contain numeric data, *PHONE ONLY* appears on the display.

## **Repair and Maintenance**

Your BRAVO *Encore!* pager, properly handled, is capable of many years of trouble-free service. However, should it ever require service, Motorola's National Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities throughout the country.

## **Cleaning Your BRAVO *Encore!* Pager:**

To clean smudges and grime from the exterior of the BRAVO *Encore!* housing, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Rinse the surface using a second cloth moistened in clean water. **Do not use alcohol or other cleaning solutions.**

## **Patent Information**

This Motorola product is manufactured under one or more Motorola U.S. Patents. A listing of these patents is provided on the underside of the belt clip and on the inside surface of the back cover of the product. Other U.S. Patents covering this product are pending.

Motorola Inc., Paging Products Group  
1500 Gateway Boulevard, Boynton Beach, FL 33426-8292

Printed in U.S.A. 1/94



6881015B75-B(x)