


CONTROL BUTTONS

Left / Right
Directional Buttons

Function / Select
Button

Read / Power
On Button

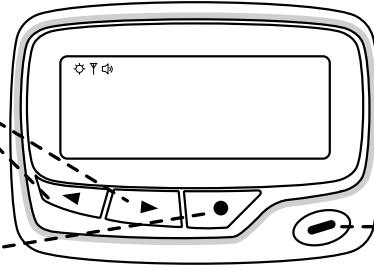

Left / Right
Directional Buttons

Used to navigate through the Function menu and through your messages.



Function / Select
Button

Used to display the Function menu, to select a pager function, and to activate your selection.




Read / Power
On Button

Used to turn the pager on and read messages.

TURNING THE ATI CORPORATE PAGER ON

Press A start-up screen is momentarily displayed and your pager activates the currently selected alert. **NOTE:** Press any button to stop the alert.


When the pager is ON and no activity is taking place, the Power Saving screen is displayed. The Power Saving screen displays the pager status indicators.

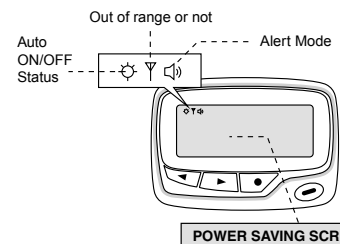

POWER SAVING SCREEN

TURNING YOUR PAGER OFF


- 1 Press to display the function menu.
- 2 Press or to move the cursor.
- 3 Press TURN PAGER OFF is displayed.
- 4 Press again to turn the pager OFF

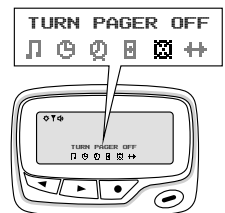

TO DELETE ALL UNLOCKED AND READ MESSAGES


- 1 From the Function menu, Press to move the cursor to
- 2 Press DELETE ALL? is displayed.
- 3 Press All unlocked messages are deleted.

NOTE: Notebook messages are not deleted with this feature.

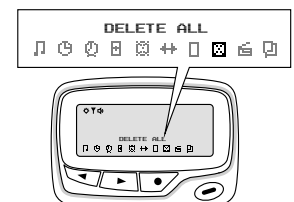





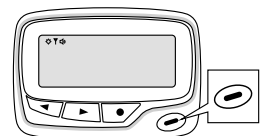




BACKLIGHT




In low-light conditions, you can manually turn the backlight on or off at any time by pressing and holding for two seconds. The backlight automatically turns off when the pager returns to Power Saving Screen.




 

TO SET AN ALARM

- 1 From the Function menu, press  to move the cursor to 
- 2 Press  The present alarm screen is displayed.
- 3 Press  to select one of 12 alarms
- 4 Press  to alarm mode selection, choose from:
DISABLE, MONDAY, TUESDAY, WED., THURSDAY, FRIDAY, SATURDAY, SUNDAY, EVERYDAY, TODAY
Also Press  to select the alarm mode, the cursor will move to associate position.
- 5 Press  to the hour digit.
- 6 Press  to adjust the hour.
- 7 Repeat step 5 and 6 to adjust minutes, AM/PM

NOTE: If the day of the week is the same as today or everyday and today mode, the  symbol is displayed.

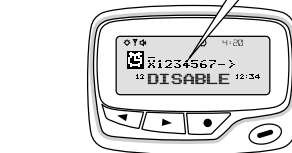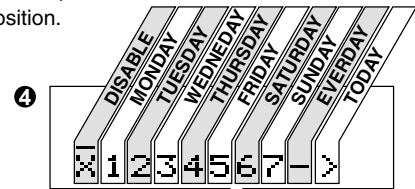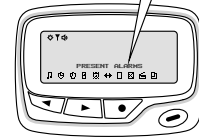
 



READING AN INCOMING MESSAGE

- 1 Press any button to stop the alert.
- 2 Press  to display your message.
A  in the right corner of the screen indicates the message is continued on an additional screen(s)
- 3 Press  to read the next screen.




 

 


ZOOM IN/OUT

- 1 Press any button to stop the alert.
- 2 Press  to display your message.
A  in the right corner of the screen indicates the message is continued on an additional screen(s)
- 3 Press  to read the next screen.



SETTING THE TIME AND DATE

- 1 From the function menu, press  to move the cursor to 
- 2 Press 
- 3 Press  to move the cursor to the 10th year digit.
- 4 Press  to adjust the 10th year.
- 5 Repeat steps 3 and 4 to adjust the year, month, day, 12/24 hours, hours, minutes.
- 6 Press  to activate the setting.

