



ALPHANUMERIC PAGER
FEATURES


- 3 different alert modes for incoming messages – Audio, Silent, Vibrate
- Maximum 20 private messages held in inbox*
- Maximum 8 private message lock-ups
- 10 different ring tones
- Messages can contain up to 4 lines of 15-20 characters each
- Alarm function
- Back-lit function

On/Off


To turn pager **on**, hold down the **red-dot key** for 2 seconds until the screen lights up.




To turn pager **off**, (1) press the **red-dot key** to display the menu screen, (2) press the **left-arrow key** once to highlight the Power Off symbol  then (3) press the **green-line key**. The screen will go blank.

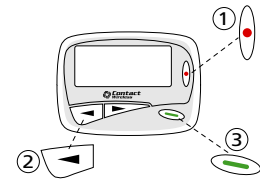

Retrieving Messages

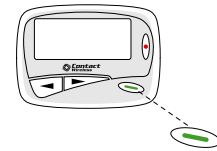To **read a message**, (1) press the **green-line key** to display the initial screen, (2) press the **green-line key** again to display the read-message screen. (3) Press the **green-line key** again to read the message.

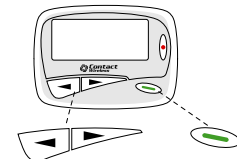


 
To **move to another message**, from the read-message screen press the **arrow keys** until the message you wish to read is displayed. Press the **green-line key** to read the message.



Deleting Messages

To delete a single message, follow the instructions for retrieving a message. You must read the message before you can delete it. Once you have selected the message you wish to delete, hold down the **green-line key** until 5 icons appear at the bottom of the screen. Press the **right-arrow key** twice to highlight . Press the **green-line key** again to delete the message.

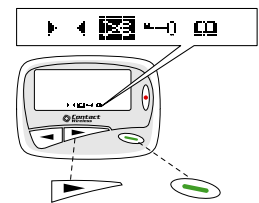

If you choose not to delete the message at this point, press the **red-dot key** to exit.

 


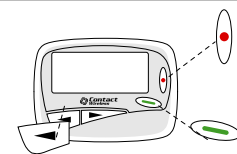
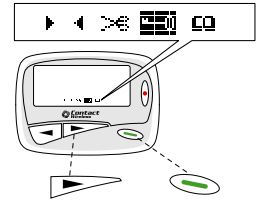
To delete all your messages, press the **red-dot key** to display the menu screen. Press the **left-arrow key** 3x to highlight  and press the **green-line key**. You will be asked if you would like to "Delete All?" press the **green-line key** again to select N or the right-arrow key once, then the **green-line key** to select Y.




Locking/Unlocking Messages


To lock a message, follow the instructions for retrieving a message. You must read the message before you can lock it. Once you have selected the message you wish to lock, hold down the **green-line key** until 5 icons appear at the bottom of the screen. Press the **right-arrow key** 3x to highlight  and press the **green-line key** to confirm.  will appear in the top right corner to signify your message is locked.

To **unlock a message**, follow the instructions for locking a message.  will appear with the 5 icons at the bottom of the screen. Press the **right-arrow key** 3x to highlight  and press the **green-line key** to confirm.

 



Storing Messages In Notebook

To **move a message to Notebook**, follow the instructions for retrieving a message. You must read the message before you can move it to Notebook. Once you have selected the message you wish to move, hold down the **green-line key** until 5 icons appear at the bottom of the screen. Press the **left-arrow key** once to highlight  and press the **green-line key** to confirm.

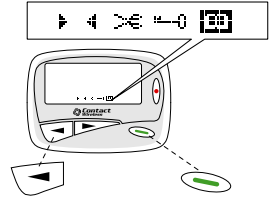


Retrieving Messages In Mail Drop


To **read a message in Mail Drop**, press the **green-line key** to display the initial screen. Press the **right-arrow key** twice to highlight , and press the **green-line key** to confirm. Press the **arrow keys** and then press the **green-line key** to read the contents of the respective items.

 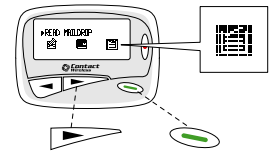



Setting / Changing Alert Modes and Ring Tones

To **change the alert mode**, press the **red-dot key** to display the menu screen.  will be highlighted. Press the **green-line key** to select:


 Audio mode  Vibration mode  Silent mode  Buzzer alert mode

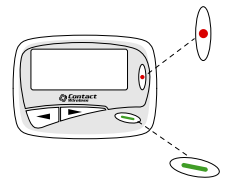


To **change the ring tone**, press the **red-dot key** to display the menu screen. Press the **arrows keys** until  is highlighted. Press the **green-line key** to view the selection of ring tones. Press the **arrow keys** to highlight desired ring tone. Press the **green-line key** to hear the ring tone you selected or press the **red-dot key** to exit.

 
 
 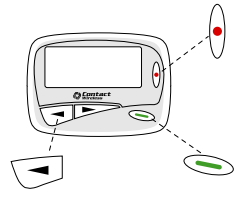



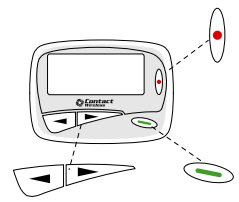
Setting Time and Date

To **set the time and date**, press the **red-dot key** to display the menu screen. Press the **arrow keys** until  is highlighted, and press the **green-line key** to select. Press the **green-line key** to highlight the hour, minute, year, date or month and press the **arrow keys** to adjust the setting. Press the **red-dot key** to exit.

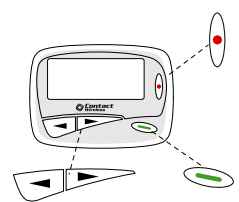

Setting Alarm

To **set the alarm**, press the **red-dot key** to display the menu screen. Press the **arrow keys** until  is highlighted, and press the **green-line key** to select. Press the **arrow keys** while  is highlighted to turn the alarm on  or off . Press the **green-line key** to highlight the hour and minute and press the **arrow keys** to adjust the setting. Press the **red-dot key** to exit.



* This pager is able to store 20 messages at a time. Once 20 messages have been stored, the pager will begin to automatically delete messages beginning with the oldest message as new pages are delivered. The pager will not delete messages that have been locked or stored in Notebook.